
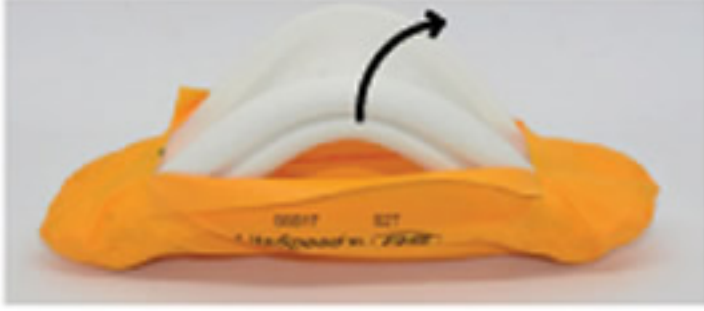




BalancePlus LiteSpeed


Instructions for Replacing an RS Sleeve


- 

1 Remove and retain the two half base plates
- 


2 Remove (and retain) the foam by lifting from the centre
- 


3 Open flap on new RS Sleeve
- 


4 Bend foam and insert both ends into new RS Sleeve
- 

5 Flatten foam to fill sleeve
- 

6 Adjust seam as required to fit into the perimeter groove in the foam to ensure WCF compliance

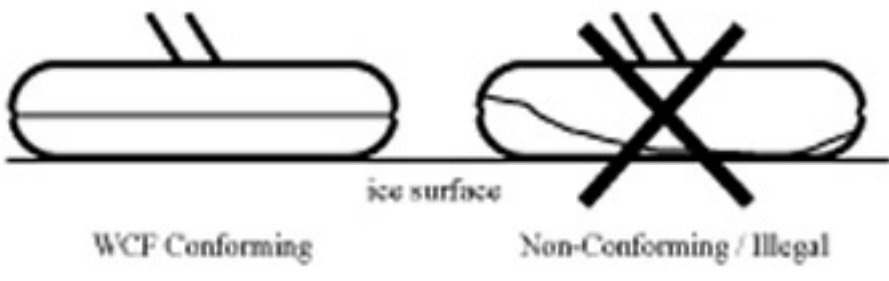

ice surface
WCF Conforming Non-Conforming / Illegal
- 

7 Install small end of half baseplates (flat side down) into foam pocket between foam and sleeve
- 

8 Flatten baseplates to tighten fabric

For more information on RS components please visit balanceplus.com/rshelp